

BRIDLE LINES SHOULD BE REGULARLY CHECKED AND MAINTAINED IN THE CORRECT TRIM OR THE KITE WILL NOT PERFORM AS DESIGNED. IF THEY ARE WORN OR NOT TO FACTORY SPECIFICATION (+ OR - 20MM) THEY SHOULD BE REPLACED. REPLACEMENTS CAN BE ORDERED INDIVIDUALLY OR AS A FULL SET FROM YOUR SHOP/DEALER.

BRIDLE LINE LENGTHS. ALL MEASUREMENTS IN MM

LINE	4m	5m	6m	7m	8m	9m	10m	11m	12m
A1	690	815	870	980	1040	1120	1180	1225	1270
A2	330	390	410	460	490	520	540	560	580
A3	370	420	430	495	530	560	595	620	630
A4	590	670	715	800	860	910	980	1020	1010
AL1	570	670	710	790	850	900	950	990	1020
AL2	430	500	515	590	620	670	710	740	760
KL	380	450	410	480	520	610	630	660	640

1. Open the kite out in a large space.
2. Inspect all bridle lines for wear/damage. Take note of label lines to be replaced.
3. Use a tape measure to measure the remaining bridles. Ask a friend to hold the end of the tape measure and bridle line in position to get an accurate measurement.
4. Pull on the line to add some tension and note each measurement.
5. Refer to the bridle line measurements sheet and rigging diagrams. Take note or label lines to be replaced.
6. Replace all bridle lines as necessary.

RIGGING DIAGRAM

